




## Resetting factory defaults




You can always revert to factory default settings. Resetting factory defaults deletes all functions and restores them to the original factory setup. You will lose all macros and user-defined buttons. Resetting to factory defaults cannot be undone.

1. Press and hold  to enter setup.
2. Press and hold  for four seconds.  
The touch screen goes blank and the LED lights up. The reset process is complete.

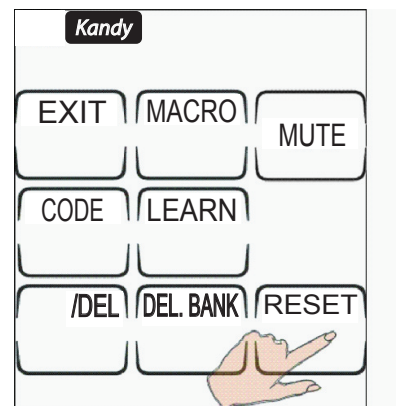

## Key/Button audible beep

When pressing any button, the action is acknowledged by an audible beep. You can mute the beep as follows:

1. Press and hold  to enter setup.
2. Press  and the boarder will start flashing. Press  to exit setup.  
*Repeat to undo the mute.*