

Roksan Audio Remote Control IR codes

Updated 7th November 2016



Caspian

Protocol	Description	Address	Command
rc5	Mute	0x10/0x30	0x0C
nec ext	Power	0x9F20	0x1A
nec ext	[1]	0x6186	0x12
nec ext	[2]	0x6186	0x13
nec ext	[3]	0x6186	0x11
nec ext	[4]	0x6186	0x10
nec ext	[5]	0x6186	0x0F
nec ext	[6]	0x6186	0x18
nec ext	[7]	0x6186	0x17
nec ext	[8]	0x6186	0x14
nec ext	[9]	0x6186	0x15
nec ext	[+10] Multi Track Selector	0x6186	0x54
nec ext	[0]	0x6186	0x16
nec ext	Fast Backward	0x6186	0x0D
nec ext	Play	0x6186	0x08
nec ext	Pause	0x6186	0x08
nec ext	Fast Forward	0x6186	0x0C
nec ext	[SHUF] Shuffle	0x6186	0x06
nec ext	[1/ALL] Repeat 1/All	0x6186	0x0E
nec ext	Stop	0x6186	0x09
rc5	[+V] Volume Up	0x10/0x30	0x10
nec ext	Next Track	0x6186	0x00
rc5	[INPUT -] Wheel Left	0x10/0x30	0x21
rc5	[INPUT +] Wheel Right	0x10/0x30	0x20
rc5	[-V] Volume Down	0x10/0x30	0x11
nec ext	Previous Track	0x6186	0x04
nec ext	[<<]	0xBF40	0x1C
nec ext	[STORE]	0xBF40	0x1A
nec ext	[>>]	0xBF40	0x5D
rc5	[TAPE] ON/OFF	0x10/0x30	0x36

K3 / K2 / Blak

Selector	Protocol	Description	Address	Command	Compatibility
AMP	-	selection of AMP	-	-	-
DAC	-	selection of DAC	-	-	-
BT	-	tape/BT	0x9F20	0x0E	K2, K3
CD always	nec ext	stop	0x6186	0x09	K2, K3, BL
CD always	nec ext	play/pause	0x6186	0x08	K2, K3, BL
CD always	nec ext	previous track	0x6186	0x04	K2, K3, BL
CD always (2s delay)	nec ext	Fast Backward	0x6186	0x0D	K2, K3, BL
CD always	nec ext	next track	0x6186	0x00	K2, K3, BL
CD always (2s delay)	nec ext	Fast Forward	0x6186	0x0C	K2, K3, BL
CD always	nec ext	repeat	0x6186	0x0E	K2, K3, BL
CD always (2s delay)	nec ext	shuffle	0x6186	0x06	K2, K3, BL
CD always	nec ext	Mute	0x9F20	0x40	K2, K3, BL
AMP (2s delay)	nec ext	power for K2	0x9F20	0x1A	K2, K3
AMP	nec ext	previous (-)	0x9F20	0x1C	K2, K3, BL
AMP	nec ext	next (+)	0x9F20	0x48	K2, K3, BL
AMP	nec ext	ok	0x9F20	0x65	BL
AMP	nec ext	volume down	0x9F20	0x1D	K2, K3, BL
AMP	nec ext	volume up	0x9F20	0x44	K2, K3, BL
DAC	nec ext	previous (-)	0x9F33	0x1C	K3
DAC	nec ext	next (+)	0x9F33	0x48	K3
DAC	nec ext	ok	0x9F33	0x65	K3